 


URC 7880

 
ENGLISH SIMPLE SET UP GUIDE




**WELCOME, PREPARE YOUR
REMOTE FOR INSTALLATION**

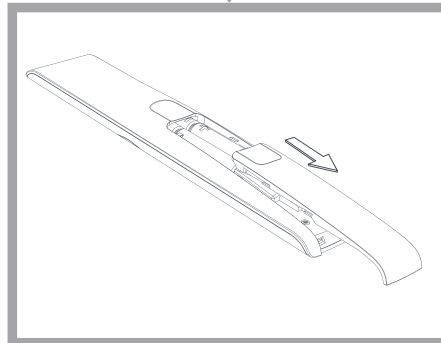


Open the battery door.

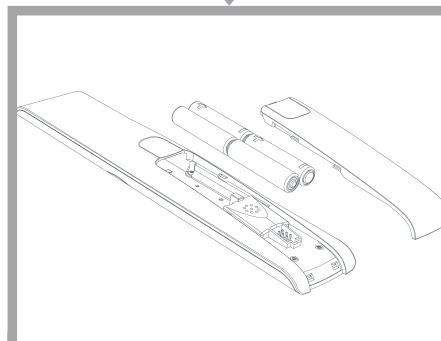

Insert 4 AAA batteries.

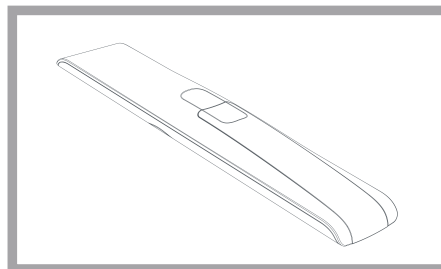 

KEY TABLE

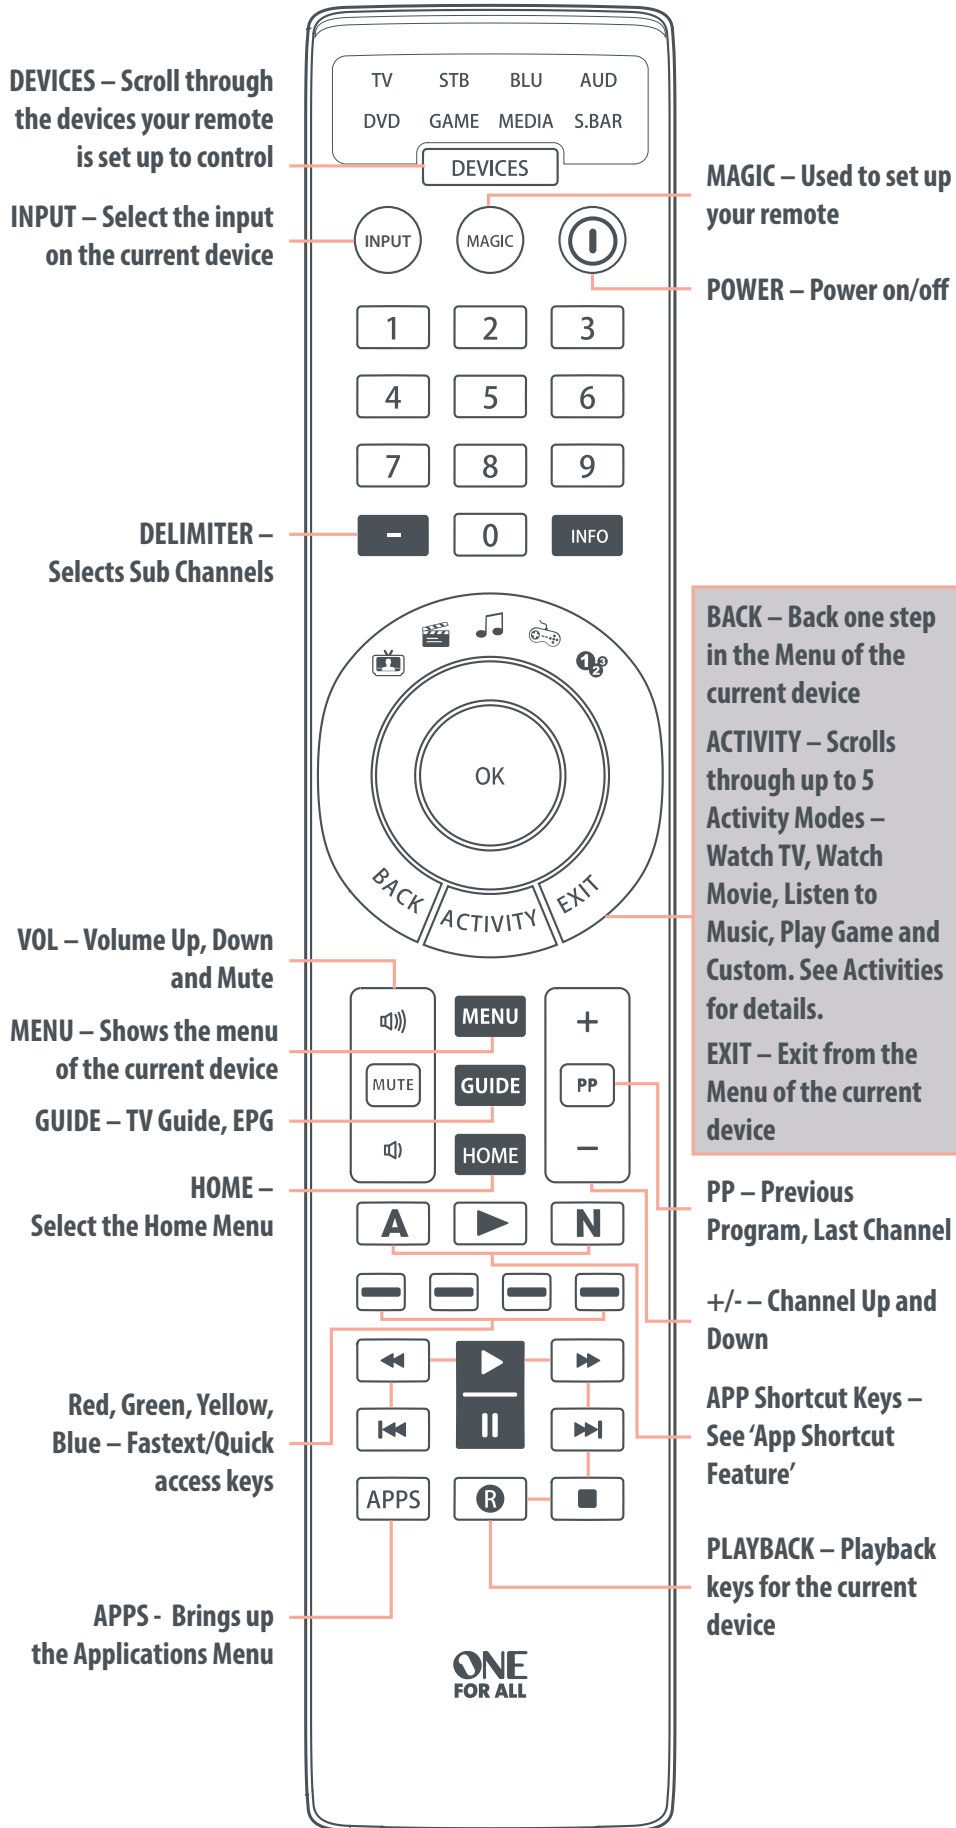 

Thank you for purchasing the One For All Smart Control.

Now you can control all of your Audio/Video devices with a single remote, while enjoying extra features such as the ability to combine devices in a single Activity Mode, sending multiple commands on a single key press (macros) and being able to customise the remote control to your exact requirements.

There is also a handy companion app for iPhone and Android phones which will allow you to keep your remote up to date with the latest devices and codes. It also offers you an alternative way to set up your remote.

To get started with your new remote, the first step is to set it up to control all of your Home Cinema devices.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET

SimpleSet is a quick and easy way of setting up the remote to control the most popular brands of each device type with only a few key presses, typically in under a minute per device. The first step is to select which device you are going to set up. The following is a list of Device Modes on the remote control, and the Device types that can be set up on that mode:

Device Mode

Type of device



TV TV, HDTV, LED, LCD, Plasma, Projector



STB Set Top Box, Satellite Receiver, Cable Converter, Freeview, DVB-T, IPTV



BLU Blu-ray, DVD, DVD Home Cinema, VCR, Laser Disk



AUD Audio, AV Receiver, Amplifier, Tuner



DVD DVD, DVD Home Cinema, Blu-ray, VCR, Laser Disk



GAME Game Console*, Digital Media Receiver, Streamer



MEDIA Digital Media Receiver, Streamer, Game Console*



S. BAR Sound Bar, Active Speaker System

* The One For All remote can only control games consoles operated by Infra-Red, either directly or via an adapter. Consoles that are controlled by Bluetooth only cannot be operated.

For each Device type, there is a list of the top brands, each with a number assigned to it, for example 5 for a Samsung TV. Locate your device and brand in the list that follows:

HOW TO SET UP YOUR REMOTE

A – SIMPLESET



TV

- | | |
|---------------------|------------|
| 1 Hisense | 6 Sharp |
| 2 LG | 7 Sony |
| 3 Panasonic | 8 TCL, RCA |
| 4 Philips, Magnavox | 9 Toshiba |
| 5 Samsung | 0 VIZIO |



STB – Sat, Cable, DVB-T

- | | |
|---|-----------------------------|
| 1 AT&T, DIRECTV, Sky Mexico | 5 Cox Communications |
| 2 Bell, Bell MTS | 6 DISH Network, Dish Mexico |
| 3 Charter, Spectrum, Time Warner Cable, Bright House Networks | 7 Optimum, Suddenlink |
| 4 Comcast, Xfinity | 8 Shaw, Shaw Direct |
| | 9 TiVo |
| | 0 Verizon, Frontier |



BLU, DVD – Blu-ray, DVD

- | | |
|---------------------|-----------|
| 1 Insignia | 6 Samsung |
| 2 LG | 7 Sharp |
| 3 Panasonic | 8 Sony |
| 4 Philips, Magnavox | 9 Toshiba |
| 5 Pioneer | 0 Yamaha |





AUD – AV Receiver, Amp, Tuner

- | | |
|--------------------|-----------|
| 1 Bose | 6 Pioneer |
| 2 Denon | 7 RCA |
| 3 Harman/Kardon | 8 Samsung |
| 4 Marantz, Philips | 9 Sony |
| 5 Onkyo, Integra | 0 Yamaha |

HOW TO SET UP YOUR REMOTE

  A – SIMPLESET

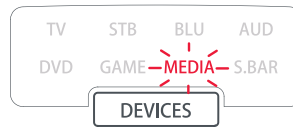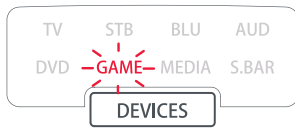

GAME, MEDIA – Games Consoles (5 & 8), Media Players



- | | |
|-------------|-------------------|
| 1 Apple | 6 Roku |
| 2 D-Link | 7 Sling Media |
| 3 Microsoft | 8 TiVo |
| 4 Netgear | 9 Western Digital |
| 5 NVIDIA | 0 Xiaomi |




S. BAR – Sound Bar, Speaker Systems

- | | |
|---------------------|--------------|
| 1 Bose | 6 Sonos, RCA |
| 2 JBL, ZVOX | 7 Samsung |
| 3 LG | 8 Sony |
| 4 Panasonic | 9 VIZIO |
| 5 Philips, Magnavox | 0 Yamaha |

To set up your device

1. Turn on your device (not on standby) and point the OFA remote towards it.
2.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
3.  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.
4.

4	5	6
7	8	9

 Hold down the digit for your brand and device as listed above (e.g. 5 for Samsung TV).
5. The remote will send Power every 3 seconds until your device switches off.
6. As soon as your device switches off, release the digit.
7.  The LED will blink twice and go out. The remote should now operate your device.

* If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

 
HOW TO SET UP YOUR REMOTE

B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

1. Turn your device on (not on standby).

2. Locate the brand of your device in the code list (included). Codes are listed by Device Type and Brand.



Device Type	Brand	Code
TV	AC	0000
TV	AC	0001
TV	AC	0002
TV	AC	0003
TV	AC	0004
TV	AC	0005
TV	AC	0006
TV	AC	0007
TV	AC	0008
TV	AC	0009
TV	AC	0010
TV	AC	0011
TV	AC	0012
TV	AC	0013
TV	AC	0014
TV	AC	0015
TV	AC	0016
TV	AC	0017
TV	AC	0018
TV	AC	0019
TV	AC	0020
TV	AC	0021
TV	AC	0022
TV	AC	0023
TV	AC	0024
TV	AC	0025
TV	AC	0026
TV	AC	0027
TV	AC	0028
TV	AC	0029
TV	AC	0030
TV	AC	0031
TV	AC	0032
TV	AC	0033
TV	AC	0034
TV	AC	0035
TV	AC	0036
TV	AC	0037
TV	AC	0038
TV	AC	0039
TV	AC	0040
TV	AC	0041
TV	AC	0042
TV	AC	0043
TV	AC	0044
TV	AC	0045
TV	AC	0046
TV	AC	0047
TV	AC	0048
TV	AC	0049
TV	AC	0050
TV	AC	0051
TV	AC	0052
TV	AC	0053
TV	AC	0054
TV	AC	0055
TV	AC	0056
TV	AC	0057
TV	AC	0058
TV	AC	0059
TV	AC	0060
TV	AC	0061
TV	AC	0062
TV	AC	0063
TV	AC	0064
TV	AC	0065
TV	AC	0066
TV	AC	0067
TV	AC	0068
TV	AC	0069
TV	AC	0070
TV	AC	0071
TV	AC	0072
TV	AC	0073
TV	AC	0074
TV	AC	0075
TV	AC	0076
TV	AC	0077
TV	AC	0078
TV	AC	0079
TV	AC	0080
TV	AC	0081
TV	AC	0082
TV	AC	0083
TV	AC	0084
TV	AC	0085
TV	AC	0086
TV	AC	0087
TV	AC	0088
TV	AC	0089
TV	AC	0090
TV	AC	0091
TV	AC	0092
TV	AC	0093
TV	AC	0094
TV	AC	0095
TV	AC	0096
TV	AC	0097
TV	AC	0098
TV	AC	0099
TV	AC	0100
TV	AC	0101
TV	AC	0102
TV	AC	0103
TV	AC	0104
TV	AC	0105
TV	AC	0106
TV	AC	0107
TV	AC	0108
TV	AC	0109
TV	AC	0110
TV	AC	0111
TV	AC	0112
TV	AC	0113
TV	AC	0114
TV	AC	0115
TV	AC	0116
TV	AC	0117
TV	AC	0118
TV	AC	0119
TV	AC	0120
TV	AC	0121
TV	AC	0122
TV	AC	0123
TV	AC	0124
TV	AC	0125
TV	AC	0126
TV	AC	0127
TV	AC	0128
TV	AC	0129
TV	AC	0130
TV	AC	0131
TV	AC	0132
TV	AC	0133
TV	AC	0134
TV	AC	0135
TV	AC	0136
TV	AC	0137
TV	AC	0138
TV	AC	0139
TV	AC	0140
TV	AC	0141
TV	AC	0142
TV	AC	0143
TV	AC	0144
TV	AC	0145
TV	AC	0146
TV	AC	0147
TV	AC	0148
TV	AC	0149
TV	AC	0150
TV	AC	0151
TV	AC	0152
TV	AC	0153
TV	AC	0154
TV	AC	0155
TV	AC	0156
TV	AC	0157
TV	AC	0158
TV	AC	0159
TV	AC	0160
TV	AC	0161
TV	AC	0162
TV	AC	0163
TV	AC	0164
TV	AC	0165
TV	AC	0166
TV	AC	0167
TV	AC	0168
TV	AC	0169
TV	AC	0170
TV	AC	0171
TV	AC	0172
TV	AC	0173
TV	AC	0174
TV	AC	0175
TV	AC	0176
TV	AC	0177
TV	AC	0178
TV	AC	0179
TV	AC	0180
TV	AC	0181
TV	AC	0182
TV	AC	0183
TV	AC	0184
TV	AC	0185
TV	AC	0186
TV	AC	0187
TV	AC	0188
TV	AC	0189
TV	AC	0190
TV	AC	0191
TV	AC	0192
TV	AC	0193
TV	AC	0194
TV	AC	0195
TV	AC	0196
TV	AC	0197
TV	AC	0198
TV	AC	0199
TV	AC	0200
TV	AC	0201
TV	AC	0202
TV	AC	0203
TV	AC	0204
TV	AC	0205
TV	AC	0206
TV	AC	0207
TV	AC	0208
TV	AC	0209
TV	AC	0210
TV	AC	0211
TV	AC	0212
TV	AC	0213
TV	AC	0214
TV	AC	0215
TV	AC	0216
TV	AC	0217
TV	AC	0218
TV	AC	0219
TV	AC	0220
TV	AC	0221
TV	AC	0222
TV	AC	0223
TV	AC	0224
TV	AC	0225
TV	AC	0226
TV	AC	0227
TV	AC	0228
TV	AC	0229
TV	AC	0230
TV	AC	0231
TV	AC	0232
TV	AC	0233
TV	AC	0234
TV	AC	0235
TV	AC	0236
TV	AC	0237
TV	AC	0238
TV	AC	0239
TV	AC	0240
TV	AC	0241
TV	AC	0242
TV	AC	0243
TV	AC	0244
TV	AC	0245
TV	AC	0246
TV	AC	0247
TV	AC	0248
TV	AC	0249
TV	AC	0250
TV	AC	0251
TV	AC	0252
TV	AC	0253
TV	AC	0254
TV	AC	0255
TV	AC	0256
TV	AC	0257
TV	AC	0258
TV	AC	0259
TV	AC	0260
TV	AC	0261
TV	AC	0262
TV	AC	0263
TV	AC	0264
TV	AC	0265
TV	AC	0266
TV	AC	0267
TV	AC	0268
TV	AC	0269
TV	AC	0270
TV	AC	0271
TV	AC	0272
TV	AC	0273
TV	AC	0274
TV	AC	0275
TV	AC	0276
TV	AC	0277
TV	AC	0278
TV	AC	0279
TV	AC	0280
TV	AC	0281
TV	AC	0282
TV	AC	0283
TV	AC	0284
TV	AC	0285
TV	AC	0286
TV	AC	0287
TV	AC	0288
TV	AC	0289
TV	AC	0290
TV	AC	0291
TV	AC	0292
TV	AC	0293
TV	AC	0294
TV	AC	0295
TV	AC	0296
TV	AC	0297
TV	AC	0298
TV	AC	0299
TV	AC	0300
TV	AC	0301
TV	AC	0302
TV	AC	0303
TV	AC	0304
TV	AC	0305
TV	AC	0306
TV	AC	0307
TV	AC	0308
TV	AC	0309
TV	AC	0310
TV	AC	0311
TV	AC	0312
TV	AC	0313
TV	AC	0314
TV	AC	0315
TV	AC	0316
TV	AC	0317
TV	AC	0318
TV	AC	0319
TV	AC	0320
TV	AC	0321
TV	AC	0322
TV	AC	0323
TV	AC	0324
TV	AC	0325
TV	AC	0326
TV	AC	0327
TV	AC	0328
TV	AC	0329
TV	AC	0330
TV	AC	0331
TV	AC	0332
TV	AC	0333
TV	AC	0334
TV	AC	0335
TV	AC	0336
TV	AC	0337
TV	AC	0338
TV	AC	0339
TV	AC	0340
TV	AC	0341
TV	AC	0342
TV	AC	0343
TV	AC	0344
TV	AC	0345
TV	AC	0346
TV	AC	0347
TV	AC	0348
TV	AC	0349
TV	AC	0350
TV	AC	0351
TV	AC	0352
TV	AC	0353
TV	AC	0354
TV	AC	0355
TV	AC	0356
TV	AC	0357
TV	AC	0358
TV	AC	0359
TV	AC	0360
TV	AC	0361
TV	AC	0362
TV	AC	0363
TV	AC	0364
TV	AC	0365
TV	AC	0366
TV	AC	0367
TV	AC	0368
TV	AC	0369
TV	AC	0370
TV	AC	0371
TV	AC	0372
TV	AC	0373
TV	AC	0374
TV	AC	0375
TV	AC	0376
TV	AC	0377
TV	AC	0378
TV	AC	0379
TV	AC	0380
TV	AC	0381
TV	AC	0382
TV	AC	0383
TV	AC	0384
TV	AC	0385
TV	AC	0386
TV	AC	0387
TV	AC	0388
TV	AC	0389
TV	AC	0390
TV	AC	0391
TV	AC	0392
TV	AC	0393
TV	AC	0394
TV	AC	0395
TV	AC	0396
TV	AC	0397
TV	AC	0398
TV	AC	0399
TV	AC	0400
TV	AC	0401
TV	AC	0402
TV	AC	0403
TV	AC	0404
TV	AC	0405
TV	AC	0406
TV	AC	0407
TV	AC	0408
TV	AC	0409
TV	AC	0410
TV	AC	0411
TV	AC	0412
TV	AC	0413
TV	AC	0414
TV	AC	0415
TV	AC	0416
TV	AC	0417
TV	AC	0418
TV	AC	0419
TV	AC	0420
TV	AC	0421
TV	AC	0422
TV	AC	0423
TV	AC	0424
TV	AC	0425
TV	AC	0426
TV	AC	0427
TV	AC	0428
TV	AC	0429
TV	AC	0430
TV	AC	0431
TV	AC	0432
TV	AC	0433
TV	AC	0434
TV	AC	0435
TV	AC	0436
TV	AC	0437
TV	AC	0438
TV	AC	0439
TV	AC	0440
TV	AC	0441
TV	AC	0442
TV	AC	0443
TV	AC	0444
TV	AC	0445
TV	AC	0446
TV	AC	0447
TV	AC	0448
TV	AC	0449
TV	AC	0450
TV	AC	0451
TV	AC	0452
TV	AC	0453
TV	AC	0454
TV	AC	0455
TV	AC	0456
TV	AC	0457
TV	AC	0458
TV	AC	0459
TV	AC	0460
TV	AC	0461
TV	AC	0462
TV	AC	0463
TV	AC	0464
TV	AC	0465
TV	AC	0466
TV	AC	0467
TV	AC	0468
TV	AC	0469
TV	AC	0470
TV	AC	0471
TV	AC	0472
TV	AC	0473
TV	AC	0474
TV	AC	0475
TV	AC	0476
TV	AC	0477
TV	AC	0478
TV	AC	0479
TV	AC	0480
TV		







LEARNING

Your One For All remote control can learn any function from any other working remote control. This can be useful if you are missing one or more functions from your original remote control and would like to add them to the Smart Control. You can learn onto any key except Magic, Devices or Activity.

You can also learn a complete device if you can't find a code.

To learn, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:






-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Using the DEVICES key, make sure the LED for the device you want to learn functions on is lit.
-  Press 975 – the LED will blink twice.
-  Press and release the key you want to learn a function onto (for example the A key) – The Watch TV, Listen To Music and Custom LEDs will light up.
-  Press and release the key on the original remote.
- The LED will blink twice to indicate the key has been learned correctly.
- Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
-  When you learned all the functions you require, press and hold the MAGIC key until the LED blinks twice and turns off.

Hints

- If the LEDs shows one long blink at step 6, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.

LEARNING

TO DELETE A LEARNED FUNCTION, THE PROCEDURE IS:

-  Hold down MAGIC until the LED under the device blinks twice.
The LED under the current mode key will stay lit.
-  Using the DEVICES key, make sure the LED for the device you want to delete functions from is lit.
-  Press 976 – the LED will blink twice.
- Press the key to delete twice – the LED will blink twice.

Repeat the above procedure for each key you want to delete.

ACTIVITIES


An Activity is a grouping of two or more devices into a single mode based upon what you're doing while using your remote - for example TV and Set Top Box can be combined together into a Watch TV mode. In this mode keys will control only the relevant device, so in this example the Volume keys would control the TV, but the channel keys would control the Set Top Box.

The OFA Smart Control features 5 Activity Modes; Watch TV, Watch Movie, Listen To Music, Play Game and Custom. Each of these modes has a choice of devices to combine.


These are:

WATCH TV

- | | |
|----------------|---|
| Combination 1: |  TV + STB (Default) |
| Combination 2: | TV + STB + AUD |
| Combination 3: | TV + AUD |
| Combination 4: | TV + S.BAR |
| Combination 5: | TV + STB + S.BAR |

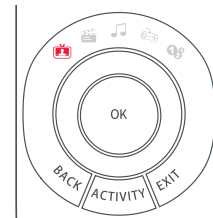 


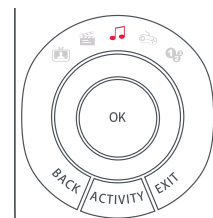 
WATCH MOVIE

- | | |
|----------------|---|
| Combination 1: |  TV + BLU (Default) |
| Combination 2: | TV + BLU + AUD |
| Combination 3: | TV + DVD |
| Combination 4: | TV + DVD + AUD |
| Combination 5: | TV + BLU + S.BAR |
| Combination 6: | TV + DVD + S.BAR |



LISTEN TO MUSIC

- | | |
|----------------|---|
| Combination 1: |  TV + AUD + MEDIA (Default) |
| Combination 2: | TV + S.BAR + MEDIA |
| Combination 3: | TV + AUD + BLU |
| Combination 4: | AUD only |
| Combination 5: | S.BAR only |




ACTIVITIES

PLAY GAME

Combination 1:
Combination 2:
Combination 3:



 TV + GAME (Default)
TV + GAME + AUD
TV + GAME + S.BAR

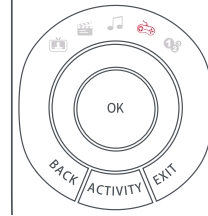

CUSTOM




Combination 1:
Combination 2:
Combination 3:
Combination 4:
Combination 5:
Combination 6:



TV + MEDIA (Default)
TV + MEDIA + AUD
TV + MEDIA + S.BAR
TV + GAME
TV + GAME + AUD
TV + GAME + S.BAR



If you set up the default devices for any Activity on the remote (for example a TV and STB for Watch TV) that Activity will be set up automatically on the remote. If you would like to change to a different combination, the procedure is as follows:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Use the ACTIVITY key to scroll through the Activities until the one you want to set is flashing.
-  Press the number of the combination you want to set – e.g 2 for TV + STB + AUD in Watch TV.
- The LED will blink twice and go out.

To access the Activities, simply press the ACTIVITY key to scroll through until the desired one is lit. You can return to controlling by device by using the DEVICES key.

INPUT Shift

As the INPUT key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the INPUT key is pressed in an Activity, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling the relevant device for the Activity (e.g. STB in Watch TV Mode).

Power Macro






If you hold down the Power key for 2 seconds in any Activity, the remote will send the Power function for each device contained within that Activity. So for example, holding Power in the default setting for Watch TV will turn both the TV and Set Top Box on or off.

MACROS

PROGRAM A MACRO

You can program any key on your OFA remote (except MAGIC, DEVICES and the three App Shortcut keys) to send multiple commands on a single press – a Macro. This can be useful for controlling multiple devices to put them in a certain state – for instance you could put your TV on HDMI 1 and press Play on the Blu-ray player to start watching a movie. A key programmed with a Macro will send the same Macro regardless of the device mode, so it is best to select a key you don't use, or use one of the spare A, B or C keys.

To program a macro, the procedure is as follows:




-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Press 995 – the LED will blink twice.
- Next select the key you want to program the Macro on.
-  Now use the DEVICES key to select the device you want the first function of the Macro to come from, for example TV.
-  Next, press the key you want to include in the Macro, for example the INPUT key.
- Repeat steps 4 (if necessary), and 5 to add more keys to the Macro. You can include up to 15 key presses.
-  To store the Macro, hold down the MAGIC key until the LED blinks twice.

* Remember to press the keys in the same order you would using your original remotes – so if you pressed AV on the TV remote and then Play on the Blu-ray remote to watch a movie, do it in the same order on the Smart Control.

* If the LED shows a long blink when you press a key in steps 3 or 4, you have entered too many keys, please try again.

TO DELETE A MACRO

If you want to remove a macro from a key, please perform the following:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Press 995 – the LED will blink twice.
- Press the key the macro is programmed on.
-  Now hold down the MAGIC key until the LED blinks twice – the Macro is deleted.

MACROS

MACROS ON ACTIVITIES

Another handy feature of the Smart Control is to put Macros on Activities; you could for example program the Watch TV Activity to send a Macro to turn on the TV and Set Top Box when selected. To do this, simply use the Activity key to select the Activity in step 3 of the procedure "Program a Macro". Next time you use the Activity, the Macro will be sent 3 seconds after you select it using the Activity key.

If you want to delete a Macro from the Activity, select it during step 3 of "To Delete a Macro".

VOLUME LOCK

If you always use one device to control volume, for example your TV or an AV Receiver, you can set up the Smart Control to always control that device, regardless of which device your remote is controlling.

To do this:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Use the DEVICES key to select the Device you want to lock the Volume to.
4. Press MAGIC once – the LED will blink twice and volume is now locked.

If there is one particular device you would like to exclude from the Volume Lock (and control its own volume), you can do this by the following:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Use the DEVICES key to select the Device you remove from Volume Lock.
4. Press VOLUME DOWN – the LED will blink four times and device is now removed.

To unlock the volume and set every device back to controlling its own volume, the procedure is:

1. Hold down MAGIC until the LED under the device blinks twice.
The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Press VOLUME UP – the LED will blink four times and Volume is now unlocked.

Please note that Volume Lock only applies in Device Mode – Activities are unaffected.

APP SHORTCUT FEATURE


The Smart Control features 3 App Shortcut keys for viewing digital TV, streamed over the internet. If your original remote control already had a key for this - for example many newer TVs have a Netflix key - then this key will perform exactly the same as the key on your original remote. However if you did not have a key like this, but still had the ability to watch a streaming service, you can use this key as a shortcut by programming a macro on it. Most AV devices which are connected to the internet, such as Smart TVs or streaming Set Top Boxes have one or more applications they can run to access TV viewing via the internet. Examples of these would be Netflix, YouTube, Amazon Prime, BBC iPlayer or similar.

 
To program the macro, you first need to know the device you use to access the service, and then the sequence of keys you need to press to always bring up the service you prefer, For example, some Panasonic TVs will start Netflix by pressing the Apps key, then Menu Down Twice, and finally the OK key. Or on an Apple TV, the sequence is Menu, Menu Down and OK.


Once you have determined the sequence for your device, follow these steps:

1. Sit in front of your device with It switched on (not on standby)

2.  Hold down the App Shortcut key until the LED blinks twice and stays lit

3.  Use the DEVICES key to select the device you want to use for the App Shortcut macro (e.g. TV)

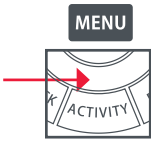4.  Now perform the sequence of keys exactly as would normally. The remote will operate your device and the macro is recorded in real time - so if it normally takes a few seconds for your device to react don't worry.

5.  One you have finished the sequence - and the Streaming Service has started on your device - hold down the App Shortcut key until the LED blinks twice and goes out. The macro is now stored.

Tips

- Make sure the Smart Control Is operating the device in question before programming
- If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
- When programming, wait for your device to respond first, the remote will remember the timing
- The App Shortcut macro is tied to one device, remember to make sure you are watching the correct device.

Customer Support: 855-716-2573 (toll free)
OFA warranty/terms & conditions: 855-569-6595 (toll free)
www.oneforall.com
Imported into the US by:

Universal Electronics Inc.
UEI Technical Support Services,
Suite 301
26250 Euclid Ave.
Euclid, OH 44132

**ONE
FOR ALL**

URC7880

CODELIST





CODELIST TV	
TV	
3M	0724
Accurian	1803
Advent	1570
Affinity	3870, 3717
Akai	0702, 0812, 1675, 2232, 1385, 1688
AOC	2014
Apex Digital	2397, 4350
Audiovox	1865, 2413, 1766, 1769, 1868, 3410
Aumark	0060
Aventura	0171
Axess	3593
Blu:sens	2735
Broksonic	1892
Casio	1205
Champion	1362
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314
Commercial Solutions	1447
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636
Curtis Mathes	0702
Daewoo	3115, 3183, 0661
Daytek	3651
Dukane	0724, 1430
Dumont	0017
Durabrand	0171, 1665, 0178
Dynex	2049, 2184, 1463
Eiki	1649, 1647, 4649
Electrohome	1670, 1570
Elektra	0017
Element	4635, 4910, 2964
Elite	1457
Emerson	1963, 1864, 1886, 1944, 1394, 017
Emprex	1665
Epson	1422, 1822
ESA	4250, 1122
Faroudja	1944, 1963, 0171
Favi	1297
Fujitsu	3382
Funai	0683
GE	0171, 2861, 1394, 1963
General Electric	1447
GFM	1963
Gibraltar	0017
Go Video	0060
GoldStar	0178
GPX	3980, 3977, 4586
Haier	2309, 1753, 3429, 4398, 4120
Hallmark	1748
Hanspree	0178
Hewlett Packard	2786, 1348
Hidear	1642
Hightong	3817
Hisense	3253
Hitachi	3519, 4618, 4740, 4398, 40
	4149
	1145, 0724, 1643, 4398, 13
	4455, 2756, 2207


B – SET UP BY CODE


If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:


1. Turn your device on (not on standby).


2.  Locate the brand of your device in the code list. Codes are listed by Device Type and Brand.

3.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.

4.  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.

5.  Enter the first 4 digit code listed for your brand (e.g. 2049 for a Insignia TV).

6.  The LED will blink twice and go out.

7.  Now aim the remote towards your device and press the POWER key.


8. If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.


* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.


B – CONFIGURACIÓN POR CÓDIGO


Si no encuentra la marca de su dispositivo en la sección A, puede configurar su dispositivo probando códigos individuales. Para ello:


1. Encienda su dispositivo (no lo deje en modo de espera).


2.  Busque la marca de su dispositivo en la lista de códigos. Los códigos se muestran por tipo de dispositivo y marca.

3.  Mantenga pulsado el botón MAGIC hasta que el LED situado bajo el dispositivo parpadee dos veces. El LED que se encuentra bajo el botón del modo activo se mantendrá encendido.

4.  Pulse el botón DEVICES varias veces hasta que el indicador LED del dispositivo que desea configurar se encienda.

5.  Introduzca el primer código de 4 dígitos de su marca (por ej. 2049 para un televisor Insignia).

6.  El LED parpadeará dos veces y se apagará.

7.  Oriente el mando hacia su dispositivo y pulse el botón de encendido (POWER).

8. Si el dispositivo se apaga, ya puede usar el mando. De lo contrario, repita los pasos 3-7 con el siguiente código de la lista.

* Algunos códigos son muy similares. Si observa que uno o más botones no funcionan como es debido, repita el proceso desde el paso 3 con el siguiente código de la lista.

CODELIST TV

TV	
3M	0724
Accurian	1803
Advent	1570
Affinity	3870, 3717
Akai	0702, 0812, 1675, 2232, 1385, 1688
AOC	2014
Apex Digital	2397, 4350
Audiovox	1865, 2413, 1766, 1769, 1868, 3410
Aumark	0060
Aventura	0171
Axess	3593
Blu:sens	2735
Broksonic	1892
Casio	1205
Champion	1362
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314
Commercial Solutions	1447
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636
Curtis Mathes	0702
Daewoo	3115, 3183, 0661
Daytek	3651
Dukane	0724, 1430
Dumont	0017
Durabrand	0171, 1665, 0178
Dynex	2049, 2184, 1463
Eiki	1649, 1647, 4649
Electrohome	1670, 1570
Elektra	0017
Element	4635, 4910, 2964
Elite	1457
Emerson	1963, 1864, 1886, 1944, 1394, 0171, 1665
Emprex	1422, 1822
Epson	4250, 1122
ESA	1944, 1963, 0171
Faroudja	1297
Favi	3382
Fujitsu	0683
Funai	0171, 2861, 1394, 1963
GE	1447
General Electric	1447
GFM	1963
Gibraltar	0017
Go Video	0060
GoldStar	0178
GPX	3980, 3977, 4586
Haier	2309, 1753, 3429, 4398, 4120, 1749, 1748
Hallmark	0178
Hannspree	2786, 1348
Hewlett Packard	1642
Hidear	3817
Hightong	3253
Hisense	3519, 4618, 4740, 4398, 4054, 4621, 4149
Hitachi	1145, 0724, 1643, 4398, 1345, 3644, 4455, 2756, 2207
HP	1642
iLo	1990, 1463
InFocus	4609, 1430, 0736, 0775, 3524
Initial	1990
Insignia	2049, 4487, 1780, 1641, 1963, 2002, 3227, 1326, 1892, 2416, 2751, 0171, 1423, 1517
Inteq	0017
iSymphony	3429, 3382, 3094
JC Penney	0060, 0178
Jensen	3204
JVC	1774, 1601, 4107, 3393, 3854, 2321, 2271, 3650, 1670, 3841
KDS	1687
Konka	1385
LeEco	4007, 4137
LG	2731, 1840, 3571, 1423, 1860, 3398, 4397, 3397, 1265, 4398, 2424, 0017, 0178
Lloyd's	3382
MAG	1687
Magnavox	3623, 1963, 1944, 1454, 2372, 1866, 4395, 3708, 1990
Matsushita	0250, 0650
Megatron	0178
Memorex	1670, 0060, 0877, 1570, 1665
MGA	0150, 0178
Midland	0017
Mintek	1990, 1603
Mitsubishi	0150, 1250, 0178, 1797
Mitsubishi Electric	0150, 1250, 0178, 1797
Naxa	2104, 2735, 3382
NEC	3257, 3000, 1797, 4693, 4380, 1398
Nikko	0178, 0017
Nimbro	2104
Norcent	0824
NuVision	2158
oCOSMO	4139
Ölevia	1610, 1144
Optimus	0250, 0650
Optoma	4609, 4658
Orion	1463
Panasonic	1480, 1291, 0250, 0650, 1271, 4743, 0178
Peerless	4254
Peerless-AV	4254
Penney	0060, 0178
Philco	1963
Philips	3069, 1867, 2800, 3396, 1454, 3623, 3678, 1455, 2372, 1394, 1744, 0017
Pioneer	0679, 1260, 1457
Polaroid	1769, 1523, 1538, 3942, 1766, 2002, 3382, 1286, 1326, 1385, 1687, 4035
Power Acoustik	1865
Prima	1753
Proscan	1447, 2256, 3895, 4035, 3636, 4490, 4491, 4483, 4492, 4495, 2634, 3382, 3717, 4375, 4493, 3429, 4494
Proview	1687
Pulsar	0017
Pyle	2196
QuantumFX	2337, 3593
Quasar	0250, 0650, 3382
Qumi	0775, 4649, 1369
RCA	1447, 2634, 4214, 2746, 3895, 2187, 2932, 4079, 2434, 4394, 4623, 4625, 2247, 3382, 4035, 1868, 2002, 3717, 4488, 1670, 3894, 4490, 4492
Runco	0017
Sampo	1597, 1755
Samsung	2051, 3993, 3970, 0812, 0702, 1632, 0060
Sansui	1670, 3564, 1463, 1892, 3377, 0171
Sanyo	1142, 1649, 3488, 4168, 1647, 4740
Sceptre	2337, 3899, 4886, 2528, 4139
Sears	0178, 0171
Seiki	4635, 3953, 4794
Seiko Epson	4250, 1122
Sens	1865
Sharp	2360, 4618, 4740, 4507, 3394, 4892, 3519, 4121, 4398
SIM2 Multimedia	1297
SkyVue	4135, 2360

CODELIST TV | STB

Skyworth	3253	Bowling Cable TV	1877
Solé	1623	Bright House	1877, 1376
Sony	0810, 4448, 4189, 4151, 0834	Bright House	
Spectroniq	1687	Networks	1877, 1376
Squareview	0171	Bristol Tennessee	
Superscan	1944	Essential Services	1877
Supersonic	3593, 2104, 1753, 3595, 3894	Buckeye Cable	
Sylvania	1963, 1944, 1886, 1864, 1394, 2861, 0171	System	1376, 2187
		Buford Media	
Symphonic	1944, 1963, 0171	Group	1877
Syntax	1144	BWTelcom	1877
Tatung	1286	Cable America	1877
TCL	4398, 3183	Cable Axion Digital	1376
Technics	0250, 0017, 0650	Cable One	1376, 3560, 1877
Teknika	0060	Cable Vision	
Telefunken	0702	Services	1877
TNCi	0017	Cablevision	3885
Toshiba	2006, 2724, 1524, 1656, 3945, 4885, 1265, 1369, 0060, 0736	Cablevision	
		du Nord	1376
TruTech	3410	Cablevisión	
Venturer	1868, 1865	Mexico	1376
Victor	0150, 0250	Cablovision	
Viewsonic	3791, 4938, 4319, 2014, 2049, 0724, 0864	Warwick	1877
		CCAP	1877
Viore	2352, 3429, 3382, 3094, 2104, 3118, 4829	CDE Lightband	1998
		Cellcom	1877
VisionQuest	3380	CenturyLink	1998, 0858
Vivitek	0775, 4649, 1369	Charter	1877, 1376, 5651, 2187, 3560, 5756, 5757
VIZIO	3758, 4723, 1758, 4905, 3358	Charter Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Wards	0017		
Westinghouse	4797, 3411, 1300, 1712	Cincinnati Bell	1877, 3068, 1376
Xiahua	1753	Cisco	1877, 0858, 3028, 2947, 1982, 2345, 2378, 5484, 2506, 3294, 4514, 5757
Xococo	1753		
Zenith	0017, 1145, 0178, 1265, 1463, 1423	Click Network	1877

STB

Access		Comporium	1877, 3560, 2187
Communications	1376	Consolidated	
Adams Cable TV	1376	Communications	1877, 1998, 2187, 0858, 3426
ADB	3246, 2254, 2586	Consolidated Telecommuni-	
Advocate		cations Company	1998
Communications	1877	CoopTel	1998
Alta Utilities	1877	Corn Belt Telephone	1877
Americable		Cox	1877, 1376, 3774, 1982, 3765
International	1877	Cox	
Amino	1615, 1481, 1898, 3605	Communications	1877, 1376, 3774, 1982, 3765
Arledge Electronics	0775	Crossman Cable	1877
Armstrong	1376, 3560	CTC	1998
Arris	1376, 1998, 2187, 2378, 1982, 3765, 5097, 5537, 5756, 0858, 5131	Darien	
		Communications	1877
Astound		Delta Cable	1376
Broadband	1877, 3560	Digeo	2187
AT&T	0858	DIRECTV	1377, 3724
AT&T U-verse	0858	DISH	0775
ATC		Dish Mexico	0775
Communications	3560	DISH Network	0775
Atlantic Broadband	1877, 3560	Dishpro	0775
ATMC	1376, 3028	EastLink	1376
Axtel	4458	Easton Cable	1877
Ballard Rural Telephone		Eatel	1877, 3028
Cooperative	0775	Echostar	0775
Beehive Broadband	1877	Entone	3426, 3048, 3068
Bell	0775, 1998	Evolution	2479, 2746
Bell Fibe TV	1998, 5097, 5537	Evolution Digital	2479, 2746
Bell MTS	1998, 5097, 5537	FairPoint	
Bell Satellite TV	0775	Communications	1877
Bellaliant	1998	Fayetteville	
Bend Broadband	2187	Electric System	1877
Blue Ridge		Foothills	
Communications	1877, 3560	Broadband	1877
BlueBridge Media	1877		

CODELIST STB

Foothills Rural Telephone Cooperative	1877
Foresite Wireless	1877
Fort Randall Telephone Company	1877
Frontier	2378, 1998, 3560
Frontier Communications	2378, 1998, 3560
GCI	3560, 1376
General Communications	3560, 1376
General Instrument	0869
GOI	0775
Google	3666
Grande Communications	1877, 3560, 1376
Greenlight Community Broadband	1877
HTS	0775
Huawei	4589
Humax	1377, 5651, 3560
ImOn Communications	1877
Innovative Systems	1898
Insight	1376, 1877
Inter Mountain Cable	1877
Izzi Mexico	1376
Izzi Telecom	1376
JVC	0775
K2 Communications	3560
Kaon	4458, 2746
Kaon Media	4458, 2746
Knology	1877
Lafayette Utilities System	1998
Layer3 TV	5370
Long Lines	1877
Lucas Valley Cable	3560
Lumos Networks	1998
MCV Broadband	1877
Media Cast	1877
Mediacom	1376, 3560, 1877
Megacable	1376, 4514
megasenal	4682
Megaseñal	4682
Merrimac Communications	1376
MetroCast Cablevision	1376
MetroNet	1877, 1998
Mid-State Community TV	3560
Midcontinent Communications	1376, 3560, 1982
Milford Communications	1877
Minerva Networks	3118
MINET	1877
Morristown Utility Systems	1877
Motorola	1376, 0869, 1998, 2378, 0858, 1982, 5097, 5756
Moxi	2187
Nelson County Cablevision	3560
Netgem	4634
Next Level	0869
NextGen Communications	1877
NfinityLink Communications	1877
North State Communications	0858
Northland Cable TV	3560
Northland Communications	1376
Northwest Iowa Telephone	1877
NorthwesTel	1376
Novus	1376
NuLink	1877
NuVisions	0775
Oakview Cable	1877
Optimum	3885
Ozona Cable & Broadband	1877
Pace	1376, 1982, 1877, 0858, 1377, 1998, 3560, 4537, 0887
Palmetto Rural Telephone Cooperative	0858
Panasonic	1982
PennVideo Network	3560
Philips	2378, 3560
Pioneer	1877
Provincial Cable	1877
Qwest	1377
RadioShack	0869
Ralls Technologies	1877
RCN	1376, 3560
Rogers	1877, 5484, 1376
Sac County Mutual Telephone	1877
Samsung	1877, 1377, 1982, 2947
SaskTel	1998
Schurz Communications	1877
Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378
Service Electric	1376, 1982
Shaw	1376, 1877, 2187
Shaw Direct	0869
Sky Mexico	0887, 1377, 0856, 3469
Source Cable	1376
Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Star Choice	0869
Sterling Cable	1877
Stratford Mutual Telephone	1877
Suddenlink	1877, 3560, 1376
SureWest	1877, 1998
Tbaytel	1998
TDS Telecom	0775
Technicolor	1377, 5651, 5484
TeleCable	1376
TELUS	3028, 0775
TiftNet	1877
Time Warner	1877, 1376, 5651, 2187
Time Warner Cable	1877, 1376, 5651, 2187
TiVo	3560, 3724
Totalplay	4634, 4589, 4591
Toxaway Cable	1877
Triangle Communication System	0775
TV Cable of Rensselaer	3560
TWC	1877, 1376, 5651, 2187
U-verse	0858
Verizon	2378
Vianet TV	3246
Vidéotron	1877, 2947
Village Cable	1877

CODELIST STB | BLU | DVD | AUDIO | S.BAR

Vision Systems	1877
Vista III Media	1982
Vyve Broadband	1376
Washington Cable	3560
Wave Broadband	1376, 3560
Western Iowa Telephone	1877
Western Montana CommunityTel	1877
Westman Communications	1376, 2187
WideOpenWest	1376, 1877, 2187
Williamstown Cable	3560
Windom Communications	1877
Wistron NeWeb	3118
WOW!	1877, 1376, 2187, 5131
Xfinity	1982, 1376, 3765, 1877, 3560, 2187
Zenith	0856
ZTE	3068

BLU | DVD

Accurian	0675
Akai	0675
Allegro	0869
Apex Digital	0672, 0717
Audio Authority	2555
Audiovox	0717
Blaupunkt	0717
CineVision	0869
Daewoo	0869
Denon	1634, 0059, 3851, 0490
DIRECTV	0739
Disney	3246, 0675
Electrohome	1702
Emerson	0675
Frontier	0739
Frontier Communications	0739
Funai	0675
GE	0717
General Electric GFM	0675
Go Video	0869, 1075, 1044, 0741, 0717
GoldStar	0741, 0869
Greenhill	0717
Harman/Kardon	3744, 0702
Humax	0739
Initial	0717
Insignia	2095, 2596
Integra	0627, 1769
Irradio	0646
JBL	0702, 3744
JVC	1550, 1602, 0623
Kenwood	0490, 0534
LG	0741, 0869, 1602
Logitech	2639
Magnavox	0675, 0646, 1506, 0539
Marantz	3444, 0539
Memorex	1702, 3031, 2213
Microsoft	2083, 2627, 0522
Mintek	0717
Mitsubishi	0059, 1521
Mitsubishi Electric	0059, 1521
NAD	2572, 0059, 0741
Nesa	0717
New Acoustic Dimension	2572, 0059, 0741
Onkyo	0627, 1769
Oppo	2545

Optimus	0059
Panasonic	1579, 0490, 1641, 3641
Philco	0675
Philips	2056, 0646, 2789, 1506, 2434, 3488, 3274, 0675, 0739, 0539
Pioneer	0059, 0631, 2854, 1571, 2847, 4199, 0142
Polk Audio	0539
Presidian	0675
Proscan	0522
RCA	0522, 0717, 1769, 3464
RCN	0739
RE-BL	2555
Rotel	0623
Samsung	0199, 1075, 2069, 2489, 1044, 2269, 2369, 4108, 0490, 1573, 0573, 2329, 2843
Sanyo	0675
Schneider	0646
Sharp	0630, 0675, 2250
Sony	1633, 1516, 1033, 0864, 1070, 0772, 1533, 4009
SV2000	0675
Sylvania	0675, 0630
Symphonic	0675
Technics	0490
TiVo	0739
Toshiba	0503, 2277, 1769, 2006, 3857, 3157, 3957
TruTech	0675
Urban Concepts	0503
VIZIO	2563
Wards	0059
WB Electronics	2555
Xbox	2083, 2627, 0522
Yamaha	0497, 3320, 0646, 3995, 0490, 0539
Zenith	0741, 0869

AUDIO | S.BAR

Acoustic Audio	4683, 4907
Aiwa	0121, 0158, 0157, 0189
Alco	1390
Altec Lansing	1485
AMC	1077
Anthem	3835, 2220
Anthem Statement	3835, 2220
Apex Digital	4334
Apple	1115
Arcam	4549, 1189, 0189
Audio Control	4475
AudioControl	4475
Audioengine	4311
AudioSource	3721
Audiotronic	1189
Audiovox	1390
Aura	4293
Axess	4095
B & W	3965, 2441, 3943
Bose	4307, 3708, 1841, 3959, 4124, 4024, 1933, 3706, 3832, 1629
Boston Acoustics	3698
Bowers & Wilkins	3965, 2441, 3943
BÖHM	4280
California Audio Labs	0029
Cambridge Audio	4029
Carver	0189, 0121, 1189
Coby	3654
Craig	4465, 4466
Curtis	3942

CODELIST AUDIO | S.BAR | GAME | MEDIA

Definitive Technology	4415, 3645, 4026	Pioneer	1123, 1935, 3057, 2432, 4015, 1023, 1384, 2743, 0823, 0032, 3956
Denon	1360, 2857, 3347, 2516, 2820, 3642, 3380, 3643, 2706, 2502, 4530, 4025, 3947, 0003, 4054, 0034, 2279	Polk Audio	3429, 1289, 2242, 0892, 4431, 0189, 0157
DMX Electronics	0157	Proficient	3661
Durabrand	1561	Proscan	1254
Dynavox	3231	Proton	0157
Dynex	3951	Pyle	4333, 4242
Emotiva	3763, 4059, 4100, 4101, 4102, 4641	QED	0157
Enclave Audio	4800	Quad	0157
Energy	3915	RCA	1254, 2655, 2719, 1123, 3969, 3281, 0420, 2041, 0823, 1023, 2611, 2544, 1390, 2743
Energy Sistem	3915	Rotel	3896, 4260, 4028
Epworth	0121, 0158, 0157, 0189	SAE	0157
Focal	4021	Samsung	2660, 2809, 2948, 3320, 3154, 2137, 4011, 3540, 1868, 1304
Gateway	1567	Sansui	0189
GoldStar	1537	Sanyo	4176
Haier	3516	Sharp	3736, 3097, 3929, 3381
Harman/Kardon	0110, 2241, 1304, 0892, 2443, 4186, 3418, 3756, 4178, 3391, 3779, 0189, 4040, 3045, 3517, 0157	Sherbourn	3763
iLive	3175	Sherwood	1077, 1567, 3120, 3136, 2169, 3679, 3793, 4022, 4090, 3755, 3770, 4771
Inkel	3770, 4090, 3793	Sherwood Newcastle	1567, 2169
Innovative Technology	3848	Sonos	3919
Insignia	3951, 2472, 2169, 1893, 2929, 3104, 3770, 4022, 4424, 2175	Sony	0158, 1441, 1759, 2172, 2475, 2522, 3700, 1758, 0000, 1622, 2860, 4315, 2582, 3487, 4366, 4457, 2610, 4107, 3986, 4285, 1822, 3257
Integra	1805, 3860, 2730, 4023, 1320, 4581, 2503, 4014, 3992, 0135	SpeakerCraft	3661
Jamo	3915	Stereophonics	1023
JBL	3756, 3535, 0110, 2241	Sunfire	0313
JVC	1676, 1374, 2040, 3049, 2239, 2331, 3365, 0072, 1871	Sylvania	0157
Kenwood	0313, 1570, 1670, 0190, 0028	Tascam	0420
Klipsch	3915, 4941, 4198, 4200	Teac	0420, 1390
Left Coast	0892	Technics	0309, 0029, 1633
Left Coast Products	0892	Thorens	1189
Lenoxx	1561	Toshiba	3627, 1123
LG	2676, 1537, 3509, 3217, 4043, 3996, 4478, 2284, 2197	TruAudio	4940
Linn	0189, 0157	Venturer	1390
Logitech	1408	Victor	0072
Magnavox	0189, 1269, 1189, 0157, 1831	VIZIO	2454, 3935, 4911
Marantz	1289, 2114, 0189, 2138, 4121, 3772, 1189, 0892, 1269, 3998, 3347	Wards	0158, 0189
Martin Logan	3526	Yamaha	0176, 1276, 3580, 2061, 2467, 0376, 0036, 3030, 2116, 4008, 2458, 3325, 3917, 2592, 2021, 0187
McIntosh	1289	Zenith	1293
McIntosh	1189	Zonda	0157
Mint	4286	ZVOX	2332, 3913, 2334
Miro	0000		
Monoprice	4505		
Myryad	1189		
NAD	1989, 0320, 1767		
New Acoustic Dimension	1989, 0320, 1767		
Nu Force	3968		
Onkyo	1805, 0135, 1320, 2730, 3860, 4023, 2503, 4041, 4581, 4014, 4533, 4574, 3984, 3992		
Optimus	1023, 0823, 0032		
Outlaw	3973		
Panasonic	0309, 3323, 1275, 3055, 2452, 3309, 1633, 2967, 3767, 0029, 2105, 1676, 1763		
Paradigm	4536, 3526, 4846		
Parasound	0420		
Philips	0189, 1269, 2434, 4105, 2459, 3379, 3962, 1189, 2675, 3801, 0157, 3227, 4012, 1831, 2311, 0892, 2289		
Pinnacle Speakers	3774, 3728		

GAME | MEDIA

A.C.Ryan	3350
ABS	1272
ADS Tech	1596
AirTV	5295
Alienware	1272
Amlogic	4899
Apple	2615
Armada	4899
Asus	2987
AVerMedia	5516
Beelink	3518, 5123
Boxee	3693
Buffalo	4947
Ceton	1272
Channel Master	4465
CyberPower	1272
Dell	1272
D-Link	3671, 3693, 1731, 2186
Echostar	5295

CODELIST GAME | MEDIA

Edal	4666	Ortek	3122
Gateway	1272	Panasonic	3760
Geniatech	4339	Pixel Magic	5155
Hewlett Packard	1272	Popcorn Hour	2260
Howard Computers	1272	RCA	3335
HP	1272	Ricavision	1272
Hush	1272	Rikomagic	5425
iBUYPOWER	1272	RKM	5425
iView	2759	Roku	3061, 1486, 2371
KM8	4666	Seagate	2698
LG	3373	Sling Media	5295, 2612
Linksys	1272	Sony	1272, 2713
Logitech	3272	Stack 9	1272
Magic TV	5155	Systemax	1272
Magnavox	3339	Tagar Systems	1272
Matricom	4899	Tibo	4339
Media Center PC	1272	Toshiba	1272
Mediabox	5155	Touch	1272
MediaGate	4525	Uebo	3350
Mediasonic	2095	Vensmile	4899
Mi	3982	Viewsonic	4249, 1272
Microsoft	4000, 1272, 2049	VIZIO	3670
Millet	3982	Voodoo	1272
Mind	1272	Western Digital	2558
Minix	4413, 3884	Xbox	4000, 2049, 1272
MyGica	5057	Xiaomi	3982
Netgear	3324, 2036, 3292	Zappiti	5536, 5538
NiveusMedia	1272	ZT Group	1272
Northgate	1272		

THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time.

If you would like to download the app, follow the links below:

* Please ensure your phone is compatible with Bluetooth Smart.

LA APLICACIÓN OFA

Su mando a distancia One For All Smart Control contiene códigos de todos los dispositivos y marcas más populares, y a diario se añaden nuevos códigos a nuestra base de datos en línea. Si instala la aplicación One For All en su dispositivo Android o iPhone, podrá actualizar su mando con nuevos códigos a través de Bluetooth Smart, también conocido como Bluetooth Low Energy*.

Hacerlo le garantiza que su mando a distancia nunca se quedará anticuado.

La aplicación también le proporciona acceso a funciones adicionales, como por ejemplo configuración de actividades.

Si desea descargarse la aplicación, siga los enlaces que se incluyen a continuación:

* Asegúrese de que su teléfono es compatible con Bluetooth Smart

APPLICATION ONE FOR ALL

Votre télécommande One For All est compatible avec tous les appareils et marques populaires. Leur nombre augmentant au fil du temps, il est nécessaire d'adapter notre base de données en fonction. En utilisant l'application One For All sur votre iPhone ou téléphone Android, vous êtes sûr de disposer des dernières mises à jour pour votre télécommande, dotée de la technologie Bluetooth Smart (ou Bluetooth Low Energy)*, et cela constamment. Vous pouvez également utiliser l'application pour configurer tous les appareils. Vous pouvez ainsi saisir le numéro de modèle de votre équipement afin d'obtenir le code approprié.

Pour télécharger l'application, utilisez le lien ci-dessous :

* Vérifiez que votre téléphone est compatible avec la technologie Bluetooth Smart.



<https://www.ofa.com/smartcontrol/pos/uk/download>

WARRANTY / GUARANTEE

WARRANTY / GUARANTEE INFORMATION

Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remotegarantee, or you may request hard copies by calling 855-716-2573, or via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

LEGAL NOTICES

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GARANTÍA | GARANTIE

ESPAÑOL

GARANTÍA / INFORMACIÓN DE GARANTÍA

Los términos y condiciones para la política de "Compatibilidad 100% Garantizada" y separadamente 1 año de Garantía Limitada contra defectos de material y mano de obra pueden encontrarse en www.oneforall.com/remotegarantee, si lo desea puede solicitar la copia física llamando al 855-716-2573, o por correo a UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Por favor incluya su nombre completo, información de su producto y todos sus datos de contacto en su petición. Para productos de venta en México los términos y condiciones a continuación se aplican.

Los términos y condiciones de garantía a continuación solo se aplican a productos de venta en México

GARANTÍA LIMITADA

Garantía: Universal Electronics Inc., garantiza que este producto estará libre de defectos de materiales y mano de obra por un periodo de un año a partir de la fecha de la compra. Esta garantía no se aplica al daño causado por el manejo y envío, o daños causados por accidente, abuso, uso indebido, desgaste natural, mantenimiento inadecuado, incumplimiento de las instrucciones o aquellos daños que resulten de modificaciones o reparaciones no autorizadas. La garantía anterior se aplicará únicamente al comprador original, y es y será en lugar de cualquier otra garantía, ya sea expresa o implícita y de todas las demás obligaciones o responsabilidades por parte de Universal Electronics Inc., siendo así que no asume responsabilidad por, ni tampoco autoriza a cualquier otra persona que pretenda actuar en su nombre para modificar o cambiar esta garantía, ni a asumir ninguna otra garantía u obligación con respecto a este producto. La responsabilidad máxima para Universal Electronics Inc., bajo cualquier circunstancia en relación con cualquier garantía se encontrará limitada al reemplazo del producto defectuoso. Se recomienda que el cliente revise constantemente su equipo para su correcto funcionamiento.

Recursos: Su recurso exclusivo bajo esta Garantía Limitada es que Universal Electronics Inc., a su elección, reparará o reemplazará, sin cargo las partes y/o la mano de obra, del equipo que se encuentre defectuoso.

Procedimiento del Servicio: Para obtener el servicio de garantía, visite la Página de Garantía y complete la forma en www.oneforall.com/warranty con su nombre completo, información de contacto, número de serie del producto, y la descripción del problema junto con una copia/imagen del recibo de compra, en donde se muestre la fecha de compra. Si es necesario, Universal Electronics Inc., le proporcionará instrucciones de envío para el producto. En caso de que haya un defecto, Universal Electronics Inc., reparará su equipo o le enviará un reemplazo. Usted pagará los costos de envío y devolución (con excepción de California y México).

Aviso Legal: LA GARANTÍA ANTERIOR ES LA ÚNICA Y EXCLUSIVA GARANTÍA POR PARTE DE UNIVERSAL ELECTRONICS INC., EN RELACIÓN CON LOS PRODUCTOS. NO HAY DECLARACIONES O GARANTÍAS ADICIONALES, EXPRESAS O IMPLÍCITAS, SALVO LO DISPUESTO POR LA LEY APLICABLE. CUALQUIER GARANTÍA IMPLÍCITA REQUERIDA POR LA LEY ESTÁ LIMITADA EN DURACIÓN AL PERIODO DE GARANTÍA ESTABLECIDO EN LA PRESENTE. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES SOBRE LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO SERLE APLICABLES.

EN NINGÚN CASO UNIVERSAL ELECTRONICS INC., O SUS FILIALES, SERÁN RESPONSABLES DE DAÑOS INCIDENTALES, ESPECIALES, INDIRECTOS, CONSECUENTES O MÚLTIPLES, INCLUYENDO DE MANERA ENUNCIATIVA MÁS NO LIMITATIVA, LAS PÉRDIDAS DE GANANCIAS, PÉRDIDAS O DAÑOS DEL SOFTWARE O LOS DATOS, O DAÑOS AL EQUIPO DERIVADOS DEL USO DE CUALQUIER PRODUCTO, INCLUSO SI SE ADVIERTE LA POSIBILIDAD DE DICHAOS DAÑOS. LA GARANTÍA ESTÁNDAR LE DA LOS DERECHOS LEGALES ESPECÍFICOS, Y USTED PUEDE TENER DERECHOS ADICIONALES, QUE PUEDE VARIAR DE UN ESTADO A OTRO. ALGUNOS ESTADOS NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE LOS DAÑOS INCIDENTALES O CONSECUENTES, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO APLICARLE.

La Garantía Limitada aplica a los siguientes productos:

URC URC7880

AVISOS LEGALES

DECLARACIÓN DE LA FCC:

Este equipo ha sido sometido a prueba y se ha determinado que satisface los límites establecidos para ser clasificado como dispositivo digital de Clase B, de acuerdo con la Parte 15 del reglamento FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en un ambiente residencial. Este dispositivo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no es instalado y utilizado de acuerdo a las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no se garantiza que no ocurrirá interferencia en una instalación particular. Si el equipo causa interferencias perjudiciales en la recepción de la señal de radio o televisión, lo cual puede comprobarse entendiéndolo y apagándolo alternativamente, se recomienda al usuario corregir la interferencia por uno de los siguientes procedimientos:

- Cambie la orientación o la ubicación de la antena receptora.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente de un circuito distinto de aquel al que está conectado el receptor.
- Solicite consejo al distribuidor o a un técnico experto en radio y televisión para obtener ayuda.

Este dispositivo satisface la parte 15 del reglamento FCC. Su utilización está sujeta a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencia dañina, y (2) este dispositivo debe aceptar cualquier interferencia recibida incluyendo interferencias que puedan causar una operación no deseada.

Cuidado: Cualquier cambio o modificación que no esté aprobado expresamente por la parte responsable por el cumplimiento puede anular la autoridad del usuario para operar el equipo.

FRANÇAIS

GARANTIE / INFORMATIONS SUR LA GARANTIE

Les conditions et modalités relatives aux règles " Fonctionnement garanti à 100%" et la garantie limitée de 1 an contre tout défaut de matériaux et de main-d'œuvre peuvent être consultés sur www.oneforall.com/remotegarantee, ou vous pouvez demander une copie papier en composant le 855-716-2573, Ou par courrier électronique au service d'assistance technique UEI, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Veuillez inclure votre nom complet, les informations sur votre produit et vos coordonnées dans votre demande de communication.

AVIS JURIDIQUES

DECLARATION DE LA FCC :

Cet équipement a été testé et déclaré conforme aux limitations prévues dans le cadre de la catégorie B des appareils numériques, définies par l'article 15 du règlement de la FCC. Ces limites ont été établies pour fournir une protection raisonnable contre les interférences préjudiciables lors d'une installation résidentielle. Cet équipement génère, utilise et diffuse des ondes radio et s'il n'est pas installé et utilisé conformément aux

instructions en vigueur, il peut provoquer des interférences préjudiciables aux communications radio. Cependant, il n'est pas possible de garantir qu'aucune interférence ne se produira pour une installation particulière. Si cet équipement produit des interférences préjudiciables lors de réceptions radio ou télévisées, qui peuvent être détectées en éteignant puis en rallumant l'appareil, essayer de corriger l'interférence au moyen de l'une ou de plusieurs des mesures suivantes :

- réorienter ou déplacer l'antenne réceptrice;
- augmenter la distance entre l'équipement et le récepteur;
- brancher l'équipement sur la prise électrique d'un circuit différent de celui auquel le récepteur est relié;
- contacter le revendeur ou un technicien radio/télévision qualifié pour toute assistance.

Cet appareil est conforme à l'article 15 du règlement de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : (1) Ce dispositif ne doit pas causer d'interférence nuisible et (2) il doit accepter toute interférence reçue, y compris une interférence qui pourrait causer un fonctionnement indésirable.

Attention : Tous changements ou modifications qui ne seraient pas expressément approuvés par les responsables des normes pourraient rendre nul le droit de l'utilisateur d'utiliser cet équipement.

Customer Support: 855-716-2573 (toll free)
OFA warranty/terms & conditions: 855-569-6595 (toll free)
www.oneforall.com
Imported into the US by:

Universal Electronics Inc.
UEI Technical Support Services,
Suite 301
26250 Euclid Ave.
Euclid, OH 44132

LEGAL NOTICES

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Guaranteed to work all brands

One For All Universal Remote Controls use the world's largest and most efficient database of infrared codes for controlling Audio Video devices. This ensures that, in almost all cases, the remote is ready to control the desired device in a matter of minutes, or even less.

Setup code database

The memory of the remote contains the best selection of codes for the devices and the market, but the full One For All database is much larger and growing every day as new brands and functionality are introduced. For this reason there is a very small possibility that the code for a particular device is not in the memory of the remote you have purchased.

If you have the original (working) remote you can make use of the One For All remote's Learning feature which will allow you to copy functions from any working original remote control.

However, if the original is not available, all One For All remotes are guaranteed 100% compatible at the time of your purchase and to ensure this we offer a free upgrade service in the unlikely event that a code is missing from your remote and cannot be learned. Our free upgrade services is available during a period of one (1) year from the date of purchase of your remote.

Customer Support

As this solution differs per case, please contact our Customer Support Team with details of the remote you have purchased and the device not controlled and they will advise further. Often an alternative code can be recommended, or in some cases, the remote can be sent to our Customer Service to be upgraded and returned within a few days*. In the very unlikely case that we have no suitable code for your device, we guarantee to refund you 100% of the price you paid for the remote.



WARRANTY / GUARANTEE INFORMATION

Please note the guarantee only applies for AV devices that the remote is designed to control, for example a TV-only remote does not cover Set Top Boxes or Audio equipment. In the case of specific replacement remotes such as the OFA Samsung remote, the guarantee only covers infrared controlled TVs of the specific brand mentioned on the packaging. The guarantee covers only infrared controlled devices and does not apply for radio frequency controlled devices.

** The initial postage must be paid by the sender, return postage will be paid by One For All.*

LIMITED WARRANTY

Warranty:

Universal Electronics Inc. warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty does not apply to damage caused by shipping or handling, or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions or as a result of any unauthorized modifications or repairs. The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Universal Electronics Inc. neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product. The maximum liability for Universal Electronics Inc. under all circumstances for any warranty issue shall be limited to a replacement of the defective product. It is recommended that the customer check their equipment on a regular basis for proper operation.

Remedies:

Your exclusive remedy under this Limited Warranty is that Universal Electronics Inc., at its option, will repair or replace, without charge for parts and/or labor, the product found to be defective.

Service Procedure: To obtain warranty service, please contact support. If necessary, Universal Electronics Inc. will provide shipping instructions for the product. If there is an actual defect, Universal Electronics Inc. will repair your device or send a replacement to you. You pay the cost to send us the product and for return shipping (except in California and Mexico).

Disclaimer:

THE FOREGOING LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY BY UNIVERSAL ELECTRONICS INC. WITH RESPECT TO THE PRODUCTS. THERE ARE NO OTHER REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, EXCEPT AS REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTIES REQUIRED BY LAW ARE LIMITED IN DURATION TO WARRANTY PERIOD PROVIDED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL UNIVERSAL ELECTRONICS INC. OR ANY OF ITS AFFILIATES BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, CONSEQUENTIAL, OR MULTIPLE DAMAGES, INCLUDING BUT NOT LIMITED TO, LOST PROFITS, LOST OR DAMAGE TO SOFTWARE OR DATA, OR DAMAGE TO EQUIPMENT ARISING OUT OF THE USE OF ANY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS STANDARD WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.



WARRANTY / GUARANTEE INFORMATION